



## EV Clock Setting Instruction R5695, R6795

1. Connect the clock to a 12Vdc power supply (positive and negative terminals on back side of clock)
2. Press the small button on the front of the gauge lens (see illustration). The pointer(s) will move slowly in a clockwise direction. By continuously pressing the button, the pointer movement will increase in speed and after a few steps the movement is continuous.
3. Release the button a few minutes before the required time, to ensure that you do not go past the time you want to set.
4. Press the button intermittently to cover the last few minutes. Release the button when the set time has been reached.

Note: Pressing of the button is slightly hard to push, in order to avoid accidental change of time. Avoid excessive pressure while pressing the button as it may damage the internals of the unit.

